


# Trimble T100

## TABLET

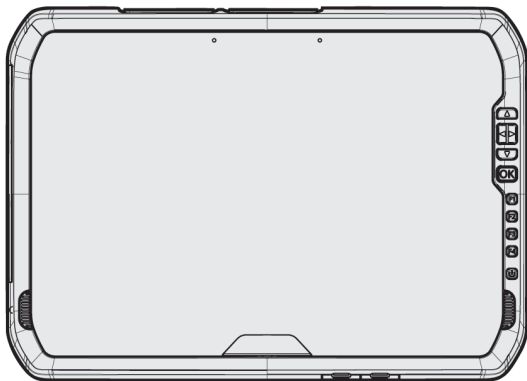


**CAUTION** – Please read the full user guide including all safety warnings, before operating this product.



### In the box

- ▶ Trimble T100 tablet with integrated batteries
- ▶ AC-DC USB-C power adapter
- ▶ USB-C to USB-A adapter
- ▶ Quick Start Guide
- ▶ EMR stylus with replacement tips and tether
- ▶ Screen protector


## PARTS OF THE TRIMBLE T100 TABLET

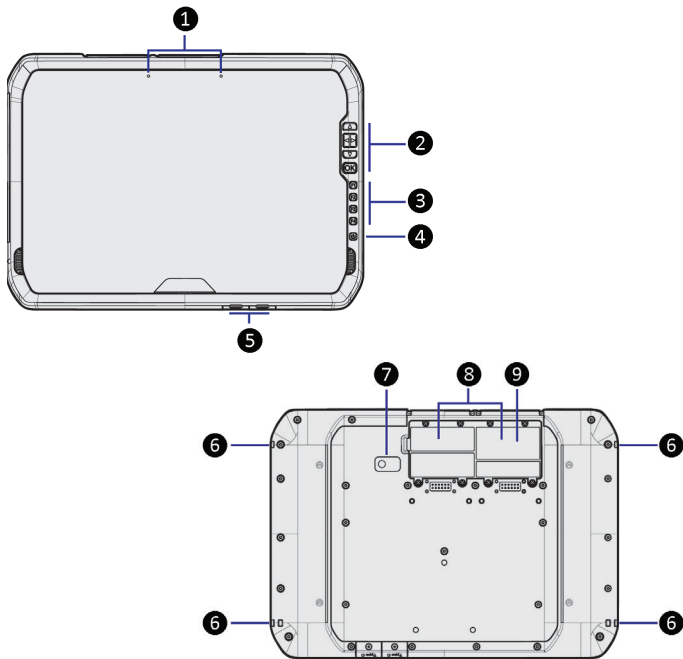


- |                                      |  |
|--------------------------------------|--|
| <b>1</b> Dual microphones            | <b>6</b> Stylus tether loops (x4)  |
| <b>2</b> Directional pad & OK button | <b>7</b> Camera and LED flash  |
| <b>3</b> Function keys (x4)          | <b>8</b> Trimble EMPOWER module bays (x2)                                    |
| <b>4</b> Power button                | <b>9</b> MicroSIM & MicroSD card slots<br>(Remove door to access card slots) |
| <b>5</b> USB C-Type ports (x2)       |  |

## INSTALL MicroSIM CARD / MicroSD CARD (OPTIONAL)


Remove door to access  
MicroSIM card and  
MicroSD card slots.

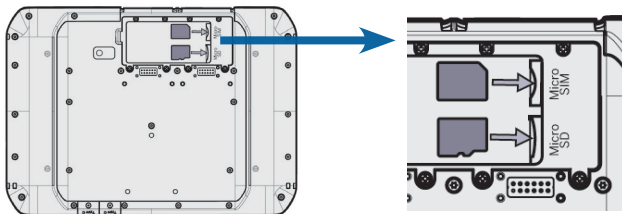


## TETHER THE STYLUS. STORE IN THE STYLUS HOLDER

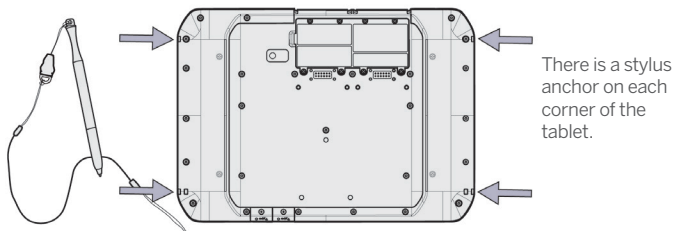


## INSTALL THE SCREEN PROTECTOR

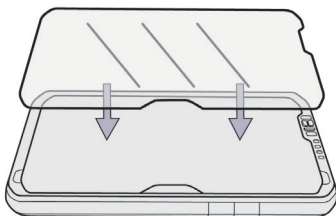

## FULLY CHARGE THE BATTERY FOR 4 HOURS

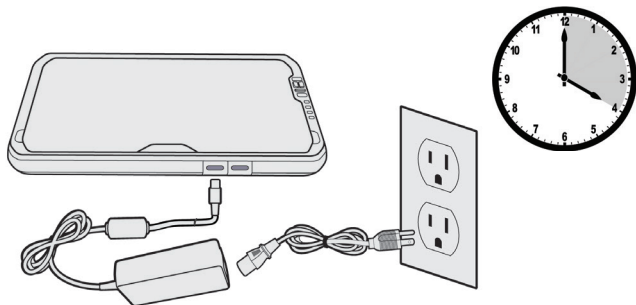

## TURN ON AND SET UP THE T100 TABLET

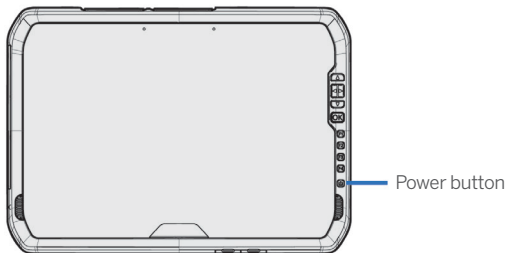

© 2020. Trimble Inc. All rights reserved. Trimble and the Globe & Triangle logo are trademarks of Trimble, registered in the United States and in other countries. All other trademarks are the property of their respective owners.  
Revision A. P/N 120528-ENG (11/20)



[www.trimble.com](http://www.trimble.com)