

Trimble T10x

TABLET



CAUTION – Please read the full user guide including all safety warnings, before operating this product.




IN THE BOX

- ▶ Trimble® T10x tablet, with 90 W battery
- ▶ Handstrap
- ▶ AC-DC USB-C power adapter with international cord kit
- ▶ Active digital pen with tether
- ▶ Screen protector
- ▶ Quick start guide

FEATURES

- ▶ Wi-Fi, Bluetooth®
- ▶ Integrated GNSS / SBAS receiver
- ▶ Hot-swappable battery
- ▶ 1 TB storage
- ▶ 32 GB RAM
- ▶ 8 Megapixel rear camera

PARTS OF THE TRIMBLE T10x TABLET

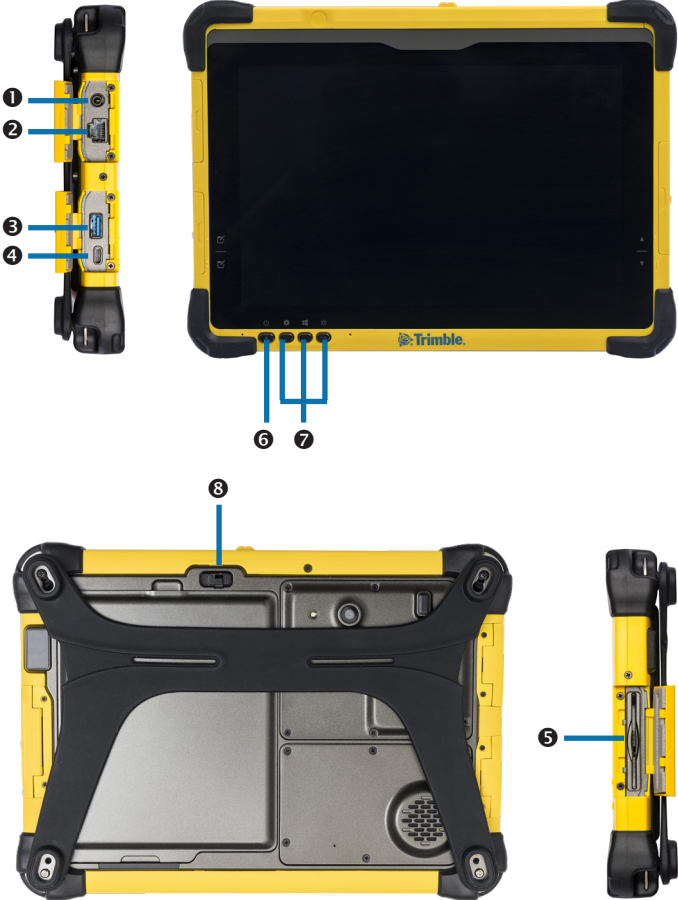

Input / Output Ports

- 1 Headphone jack
- 2 LAN port
- 3 USB 3.0 port
- 4 USB-C port (power input)
- 5 Smart card reader

Button functions

- 6 Power button
- 7 Programmable buttons
- 8 Battery Latch. Push the switch up to unlock this latch, then slide the latch left to remove the battery.

OPERATION

- ▶ To turn on the tablet, push and quickly release the Power button (6).
- ▶ To put the tablet in Standby mode when it is on, push and quickly release the Power button (6).
- ▶ To turn the tablet off for extended storage, power off safely using any software function provided in the operating system that shuts down the device.
- ▶ To remove the battery, push the switch (8) up to unlock the latch, then push and hold the latch to the left. Lift the battery up and out.

USING THE HANDSTRAP

- ▶ Hold the tablet as illustrated, with your palm securely against the back of the tablet, thumb on top, and fingers gripping the side.
- ▶ Designed for both left-hand and right-hand use.





NOTES -

- Before turning on your tablet for the first time, fully charge the battery pack using the AC-DC adapter that ships with the tablet.
- When the battery pack is charging, the blue-colored battery LED should blink slowly. If plugging in the AC-DC adapter does not trigger this blinking activity and the LED stays dark, the battery pack may have been drained substantially. Try disconnecting/ reconnecting to mains power using the AC-DC adapter a few times to activate the charging process.
- To conserve power, use (push and quick release) the Power button to put the tablet in Standby mode while not in use. Pushing briefly on the same button will wake up the system within seconds.
- Avoid using the Power button (“hold 4+ seconds” feature) to turn off the tablet—this form of hardware shutdown is intended to be a means of recovery from lockups, and not as normal operation.

© 2021, Trimble Inc. All rights reserved. Trimble and the Globe & Triangle logo are trademarks of Trimble, registered in the United States and in other countries. All other trademarks are the property of their respective owners.
Revision B. P/N 127871 (07/21)

Trimble Inc.
10368 Westmoor Drive
Westminster CO 80021
USA

Trimble Europe
Box 64, SE- 182 11
Danderyd,
Sweden



www.trimble.com