

Trimble TSC710 controller

Quick Start Guide



CAUTION – Please read the full user guide including all safety warnings, before operating this product.

In the box

- A TSC710 controller
- Glass Screen Protector, and a pack containing an Isopropyl Alcohol prep pad, grey lint-free cleaning cloth, and blue lint/dust removal sticker
- 2 m (6.56 feet) USB-Type C (male) to USB-Type C (male) USB 3.0 cable for charging and data transfer
- Capacitive stylus with integrated cross-tip and flat-tip screwdrivers, tether, and 2 stylus tips
- Handstrap
- Protective soft carry case



Parts of the TSC710 controller



1 - Ambient light sensor	14 - Speaker
2 - Android keys	15 - Trimble Empower module bays
3 - Function keys (F1 - F3, F4 - F5)	16 - Stylus holder
4 - Power / battery charging LED	17 - Trimble Empower module contacts
5 - Power key	18 - Pole mount screws
6 - Shift LED	19 - Handstrap connector points (x4)
7 - CAPS lock LED	20 - Stylus tether points
8 - LEDs left to right; Fn, Ctrl, Search	21 - Gore Vent: DO NOT COVER!
9 - Microphone (x2)	22 - Camera & camera flash
10 - OK and directional keys	23 - NFC Antenna
11 - Cursor lock LED	24 - Cover for optional battery pack & SIM card slot
12 - Function Keys (F6 - F11; F12 = Shift+F11)	25 - USB-C port, bottom of device under port cover
13 - AGr LED	

Inserting a SIM card (optional)

1. Turn off the device.
2. Remove the cover from the back of the device. If the accessory battery is installed, remove it to access the SIM card door.



3. Pry open the SIM card door.
4. Slide the SIM card into the slot in the orientation shown in the SIM enclosure.



5. Close the SIM door, making sure it clicks shut.
6. Replace the cover and tighten the 4 screws.

Tether the stylus

There is a stylus tether on the left and on the right of the device.



Apply a screen protector



Attach the handstrap

Attach the handstrap to the left or the right side of the device.



Charge the battery

Trimble devices are shipped in Shelf mode; the device must be connected with a USB cable and a power adapter into an electrical outlet before the device can be turned on.

Charge the battery for 3.5 hours (internal battery only), or 8 hours if the optional removable battery is also installed.



Turn on and set up the TSC710 controller

Press-hold the Power key for about 4 seconds. The **Powered by Android** boot screen appears.



The first time you turn on the device, the Android operating system takes you through some basic setup steps; follow the instructions on the screen.

Legal information

Trimble Inc.

trimble.com

© 2025, Trimble Inc. All rights reserved.

Trimble and the Globe & Triangle logo are trademarks of Trimble Inc., registered in the United States and in other countries.

Google, Google Play and other marks are trademarks of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. All other trademarks are the property of their respective owners.

October 2025, version 1, revision A.